




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

LED High Bay Light

Installation Instructions



Physical Dimensions(Unit: mm/inch)
100W/150W/200W

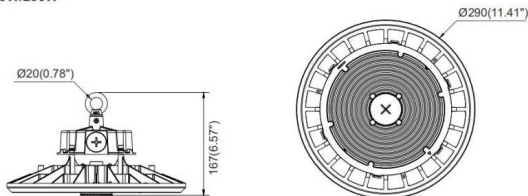


| Product Specifications | 100W | 150W | 200W |
|---------------------------|--|------|-------------------------------------|
| Input Voltage | 100-277VAC / 120-277VAC / 100-240VAC / 220-240VAC (Subject to the input voltage on nameplate) | | |
| Power Frequency | 50 / 60 Hz | | |
| Outlook Dimensions | Ø290x167mm(Ø11.41"x6.57'') | | |
| Luminaire Net Weight(±6%) | 1.9kg(4.19Lbs) | | |
| Working Temperature | -30°C to +50°C(-22°F to +122°F) | | -30°C to +45°C (-22°F to +113°F) |
| Storing Temperature | -40°C to +70°C(-40°F to +158°F) | | |

* Please subject to actual product for accurate weight.

1

Power Selectable

Caution:
Please power off the luminaire before adjusting the DIP switch.
Please do not use metal tool to adjust the DIP switch.
Please adjust the switch gently.

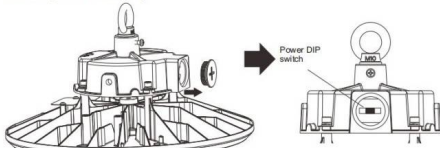


Power Selectable




| 100% | 80% | 60% |
|---------|--------|--------|
| A(100%) | B(80%) | C(60%) |
| 100W | 80W | 60W |
| 150W | 120W | 90W |
| 200W | 160W | 120W |

* The tolerance for power is ±10%


Sensor Mount

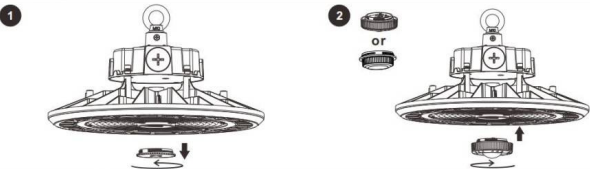

Suspension Mount

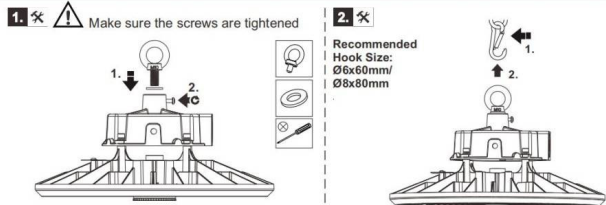

Ceiling Mount(Unit: mm/inch)

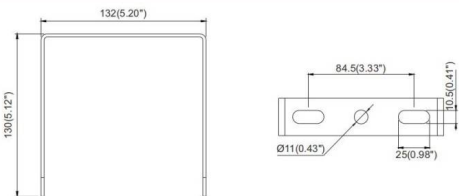

2

