




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Main Parts

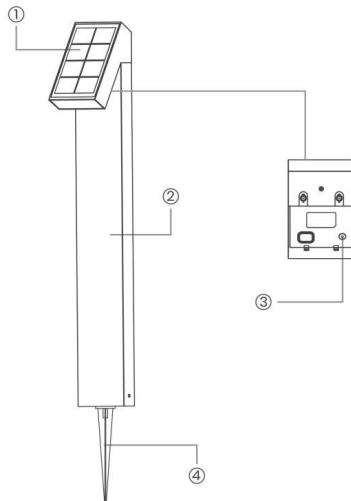


- ① Solar Panel
- ② Lamp Body
- ③ Switch Button
- ④ Stake

Characteristics


Battery: Li-ion Battery
 Solar panel: Monocrystalline silicon
 Materials: ABS+Aluminium Alloy

How to install the device?


Expansion Screw Install

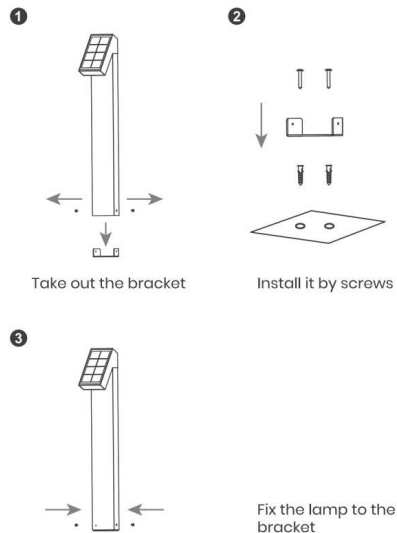

Ground Staking

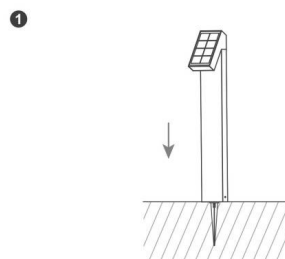

Working process instructions

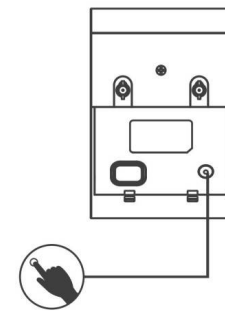

Switch Button

1. Switch on and off: long press for 1.5S
2. Short press to change the lighting mode

Lighting Mode

- M1: 25% till dawn
- M2: 50% till dawn
- M3: 75% till dawn
- M4: 100% till dawn