




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

### Main Parts

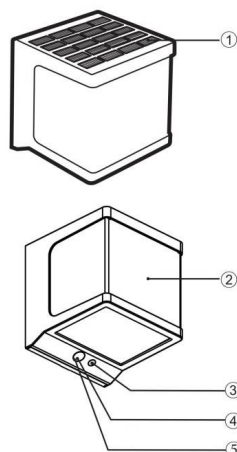


- ① Solar panel
- ② Lampshade
- ③ Switch
- ④ PIR
- ⑤ Indicator light

#### **Electrical Characteristics:**

Solar panel: Monocrystalline  
Rechargeable Battery: Li-ion Battery  
Material: ABS & PC


### How to install the device?

Fix the lamp on the wall with the screws.

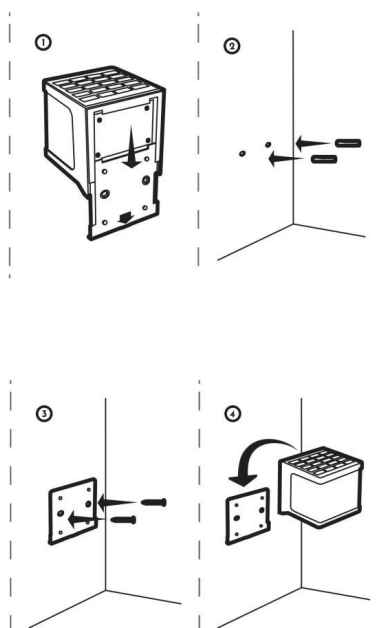

Keep the solar panel face the sunlight directly to ensure it can charge the inside Li-ion battery effectively

### Working process instructions

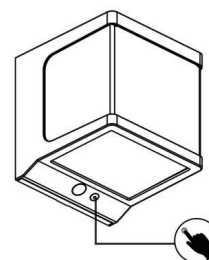

#### **Switch**

Press 1.5S for ON/OFF  
Short press to change the lighting mode

#### **Lighting mode indicator**

##### **Red LED :**

M1: Blink one time  
M2: Blink two times  
M3: Blink three times

#### **Lighting mode**

M1: 100LM+PIR 1000LM(10S)  
M2: 0+PIR 1000LM(10S)  
M3: 300LM 6H