



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0\*\*\*. \*\* 55mm, 86.D084.1\*\*\*. \*\*75mm, 86.D084.2\*\*\*. \*\*95mm, 86.D085.0\*\*\*. \*\*55\*55mm, 86.D085.1\*\*\*. \*\*75\*75mm  
86.D085.2\*\*\*. \*\*95\*95mm, 86.D086.0\*\*\*. \*\*57mm, 86.D086.1\*\*\*. \*\* 77mm, 86.D086.2\*\*\*. \*\*97mm

86.D087.0\*\*\*. \*\*57\*57mm, 86.D087.1\*\*\*. \*\* 77\*77mm, 86.D087.2\*\*\*. \*\*97\*97mm, 86.DS84.1\*\*\*. \*\*75mm, 86.DS84.2\*\*\*. \*\*95mm  
86.DS85.1\*\*\*. \*\*75\*75mm, 86.DS85.2\*\*\*. \*\*95\*95mm, 86.DS86.1\*\*\*. \*\* 77mm, 86.DS86.2\*\*\*. \*\* 97mm, 86.DS87.1\*\*\*. \*\*77\*77mm  
86.DS87.2\*\*\*. \*\*97\*97mm, 86.D284.0\*\*\*. \*\*128\*67mm, 86.D284.1\*\*\*. \*\*179\*91mm, 86.D284.2\*\*\*. \*\*223\*112mm  
86.D285.0\*\*\*. \*\*122\*60mm, 86.D285.1\*\*\*. \*\*164\*77mm, 86.D285.2\*\*\*. \*\*207\*95mm, 86.D286.0\*\*\*. \*\*128\*67mm  
86.D286.1\*\*\*. \*\*180\*90mm, 86.D286.2\*\*\*. \*\*225\*111mm, 86.D287.0\*\*\*. \*\*118\*58mm, 86.D287.1\*\*\*. \*\*165\*77mm  
86.D287.2\*\*\*. \*\*209\*97mm

