



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0***.55mm, 86.D084.1***.75mm, 86.D084.2***.95mm, 86.D085.0***.55*55mm, 86.D085.1***.75*75mm, 86.D085.2***.95*95mm, 86.D086.0***.57mm, 86.D086.1***.77mm, 86.D086.2***.97mm, 86.D087.0***.57*57mm, 86.D087.1***.77*77mm, 86.D087.2***.97*97mm, 86.DS84.1***.75mm, 86.DS84.2***.95mm, 86.DS85.1***.75*75mm, 86.DS85.2***.95*95mm, 86.DS86.1***.77mm, 86.DS86.2***.97mm, 86.DS87.1***.77*77mm, 86.DS87.2***.97*97mm, 86.D284.0***.128*67mm, 86.D284.1***.179*91mm, 86.D284.2***.223*112mm, 86.D285.0***.122*60mm, 86.D285.1***.164*77mm, 86.D285.2***.207*95mm, 86.D286.0***.128*67mm, 86.D286.1***.180*90mm, 86.D286.2***.225*111mm, 86.D287.0***.118*58mm, 86.D287.1***.165*77mm, 86.D287.2***.209*97mm

