



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0***. 55mm, 86.D084.1***. 75mm, 86.D084.2***. 95mm, 86.D085.0***. 55*55mm, 86.D085.1***. 75*75mm, 86.D085.2***. 95*95mm, 86.D086.0***. 57mm, 86.D086.1***. 77mm, 86.D086.2***. 97mm, 86.D087.0***. 57*57mm, 86.D087.1***. 77*77mm, 86.D087.2***. 97*97mm, 86.DS84.1***. 75mm, 86.DS84.2***. 95mm, 86.DS85.1***. 75*75mm, 86.DS85.2***. 95*95mm, 86.DS86.1***. 77mm, 86.DS86.2***. 97mm, 86.DS87.1***. 77*77mm, 86.DS87.2***. 97*97mm, 86.D284.0***. 128*67mm, 86.D284.1***. 179*91mm, 86.D284.2***. 223*112mm, 86.D285.0***. 122*60mm, 86.D285.1***. 164*77mm, 86.D285.2***. 207*95mm, 86.D286.0***. 128*67mm, 86.D286.1***. 180*90mm, 86.D286.2***. 225*111mm, 86.D287.0***. 118*58mm, 86.D287.1***. 165*77mm, 86.D287.2***. 209*97mm

