

- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0\*\*\*.55mm, 86.D084.1\*\*\*.75mm, 86.D084.2\*\*\*.95mm, 86.D085.0\*\*\*.55\*55mm, 86.D085.1\*\*\*.75\*75mm  
 86.D085.2\*\*\*.95\*95mm, 86.D086.0\*\*\*.57mm, 86.D086.1\*\*\*.77mm, 86.D086.2\*\*\*.97mm  
 86.D087.0\*\*\*.57\*57mm, 86.D087.1\*\*\*.77\*77mm, 86.D087.2\*\*\*.97\*97mm, 86.DS84.1\*\*\*.75mm, 86.DS84.2\*\*\*.95mm  
 86.DS85.1\*\*\*.75\*75mm, 86.DS85.2\*\*\*.95\*95mm, 86.DS86.1\*\*\*.77mm, 86.DS86.2\*\*\*.97mm, 86.DS87.1\*\*\*.77\*77mm  
 86.DS87.2\*\*\*.97\*97mm, 86.D284.0\*\*\*.128\*67mm, 86.D284.1\*\*\*.179\*91mm, 86.D284.2\*\*\*.223\*112mm  
 86.D285.0\*\*\*.122\*60mm, 86.D285.1\*\*\*.164\*77mm, 86.D285.2\*\*\*.207\*95mm, 86.D286.0\*\*\*.128\*67mm  
 86.D286.1\*\*\*.180\*90mm, 86.D286.2\*\*\*.225\*111mm, 86.D287.0\*\*\*.118\*58mm, 86.D287.1\*\*\*.165\*77mm  
 86.D287.2\*\*\*.209\*97mm

