



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0***. ** 55mm, 86.D084.1***. **75mm, 86.D084.2***. **95mm, 86.D085.0***. **55*55mm, 86.D085.1***. **75*75mm

86.D085.2***. **95*95mm, 86.D086.0***. **57mm, 86.D086.1***. ** 77mm, 86.D086.2***. **97mm

86.D087.0***. **57*57mm, 86.D087.1***. ** 77*77mm, 86.D087.2***. **97*97mm, 86.DS84.1***. **75mm, 86.DS84.2***. **95mm
86.DS85.1***. **75*75mm, 86.DS85.2***. **95*95mm, 86.DS86.1***. ** 77mm, 86.DS86.2***. ** 97mm, 86.DS87.1***. **77*77mm
86.DS87.2***. **97*97mm, 86.D284.0***. **128*67mm, 86.D284.1***. **179*91mm, 86.D284.2***. **223*112mm
86.D285.0***. **122*60mm, 86.D285.1***. **164*77mm, 86.D285.2***. **207*95mm, 86.D286.0***. **128*67mm
86.D286.1***. **180*90mm, 86.D286.2***. **225*111mm, 86.D287.0***. **118*58mm, 86.D287.1***. **165*77mm
86.D287.2***. **209*97mm

