



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Cut out in the right size: 86.D084.0\*\*\*.\*\* 55mm, 86.D084.1\*\*\*.\*\*75mm, 86.D084.2\*\*\*.\*\*95mm, 86.D085.0\*\*\*.\*\*55\*55mm, 86.D085.1\*\*\*.\*\*75\*75mm

86.D085.2\*\*\*.\*\*95\*95mm, 86.D086.0\*\*\*.\*\*57mm, 86.D086.1\*\*\*.\*\* 77mm, 86.D086.2\*\*\*.\*\*97mm

86.D087.0\*\*\*.\*\*57\*57mm, 86.D087.1\*\*\*.\*\* 77\*77mm, 86.D087.2\*\*\*.\*\*97\*97mm, 86.DS84.1\*\*\*.\*\*75mm, 86.DS84.2\*\*\*.\*\*95mm  
 86.DS85.1\*\*\*.\*\*75\*75mm, 86.DS85.2\*\*\*.\*\*95\*95mm, 86.DS86.1\*\*\*.\*\* 77mm, 86.DS86.2\*\*\*.\*\* 97mm, 86.DS87.1\*\*\*.\*\*77\*77mm  
 86.DS87.2\*\*\*.\*\*97\*97mm, 86.D284.0\*\*\*.\*\*128\*67mm, 86.D284.1\*\*\*.\*\*179\*91mm, 86.D284.2\*\*\*.\*\*223\*112mm  
 86.D285.0\*\*\*.\*\*122\*60mm, 86.D285.1\*\*\*.\*\*164\*77mm, 86.D285.2\*\*\*.\*\*207\*95mm, 86.D286.0\*\*\*.\*\*128\*67mm  
 86.D286.1\*\*\*.\*\*180\*90mm, 86.D286.2\*\*\*.\*\*225\*111mm, 86.D287.0\*\*\*.\*\*118\*58mm, 86.D287.1\*\*\*.\*\*165\*77mm  
 86.D287.2\*\*\*.\*\*209\*97mm

