




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Tracking and luminaire:

First trunking rail should have one side connecting plate & last trunking rail with no connecting plate on both sides, then fix the Luminaire to trunking rail then lock holder, then keep end caps at both sides.

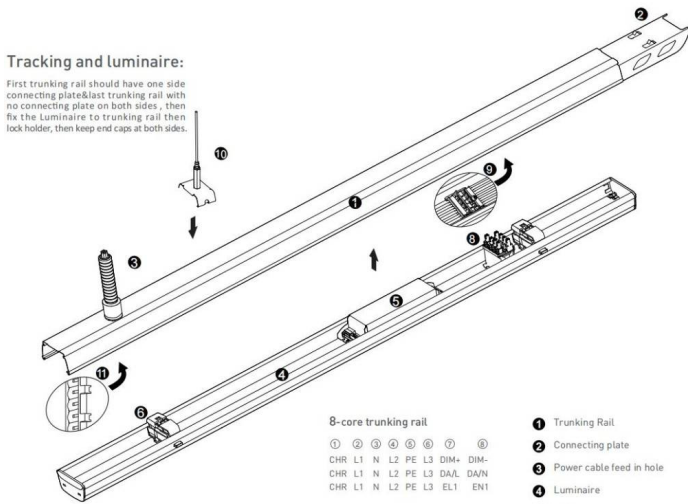

8-core trunking rail

① ② ③ ④ ⑤ ⑥ ⑦ ⑧
 CHR L1 N L2 PE L3 DIM+ DIM-
 CHR L1 N L2 PE L3 DA/L DA/N
 CHR L1 N L2 PE L3 EL1 ENT


12-core trunking rail

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫
 CHR L1 N L2 PE L3 DIM+ DIM- EL1 ENT1 ENT2 EL2
 CHR L1 N L2 PE L3 DIM+ DIM- L4 N2 L5 L6
 CHR L1 N1 L2 PE L3 DA/L DA/N L4 N2 L5 L6

⑪ Definition of 5-core 8-core and 12-core trunking rail

5-core trunking rail ① ② ③ ④ ⑤
 L1 N L2 PE L3


Step 1
Mounting Suspension

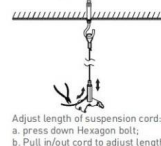


Step 2
Connecting Power Supply



Step 3
Connecting Trunking Rail

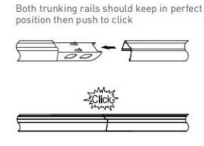


Step 4
Mounting Luminaire

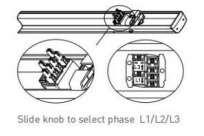


Make sure male & female connectors in right position then fix the luminaire to trunking rail.

Step 5
LED linear lighting system

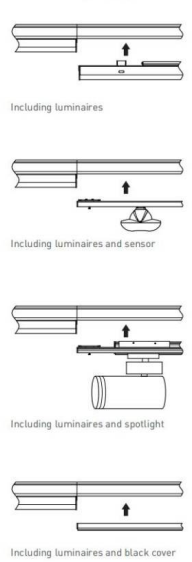


Wire diagram of triple circuits function

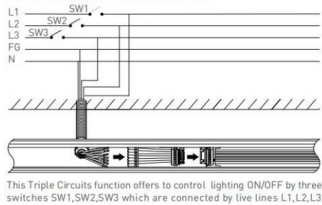

This Triple Circuits function offers to control lighting ON/OFF by three switches SW1, SW2, SW3 which are connected by live lines L1, L2, L3

Pendant and mounting installation

Starting installation distances point should be 800 mm to 1000 mm, then in between 1st & 2nd point should be 3000 mm max

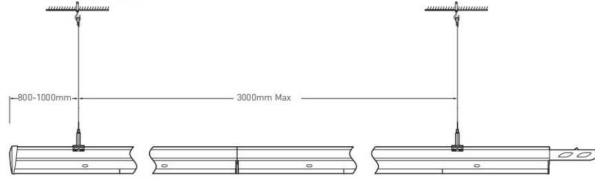


Four options for installation




Safety notes:
 Installation should be performed only by qualified electrician.

- Make sure no voltage while installation.
- Connect cable wires according to wire labeling.
- Max current should not exceed 16A in one power feed in circuit.

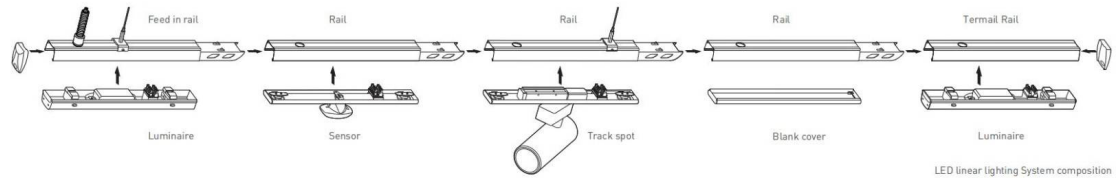


Terminal module:


Terminal module can be independently installed as a single unit, it also can be connected at end of one linear light row.

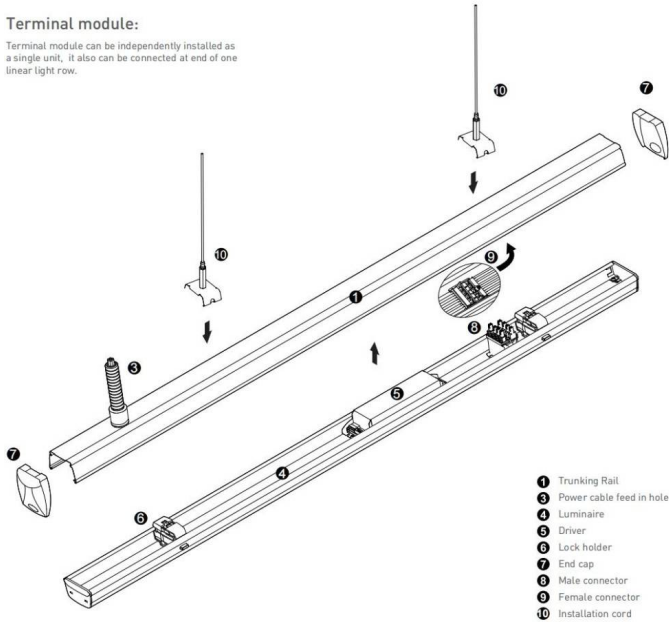

Step 1
Mounting Suspension

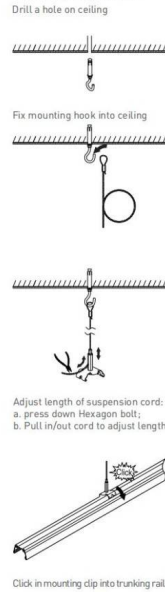

Step 2
Connecting Power Supply

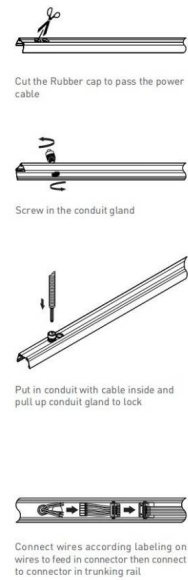

Step 3
Mounting Luminaire

