 


1. Drill two holes in the wall or floor according to the hole size of the support, and put glue plugs or wood blocks into the holes.



2. Loosen the M3 machine screws, adjust the distance between the two supports, and then lock the screws



3. Attach the light fixture to the wall or floor with wood screws.




OUTDOOR / WALL WASHER / WALLLIGHT / WALLLIGHT (OW03)

Item code 86.0W03.4021.03



4. Align the power cable connector with the power cable connector of the lamp and connect it to the card position.

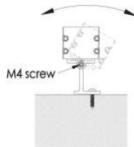

5. Loosen the M4 cup screw of the support, adjust the Angle of the lamp and then lock the screw

