
Item code 86.SO25.1300.02





- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Main Parts

 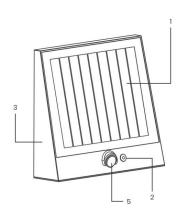


- Solar Panel
 Switch Button
 Lamp Body
 LED
 PIR


Battery: Li-ion Battery Solar panel: Monocrystalline silicon Materials: ABS

How to install the device?

Working process instructions



Take off the bracket from the lamp body

 


Drilling and embedding the expansion screws into the wall




3

 Fix the bracket by srews



Hang the lamp body on the bracket

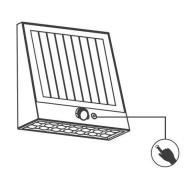

Switch Button

- 1. ON/OFF: Long press for 1.5S.
 (After the initial activation, the lamp will turn on/off automatically when dark/dawn.)
 2. Change lighting mode: Short press.

Lighting Mode M1: 25% till dawn

M2: 10%+PIR (30S) M3: 0+PIR (30S) M4: 100% till dawn

