




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

Main Parts


How to install the device?

Working process instructions

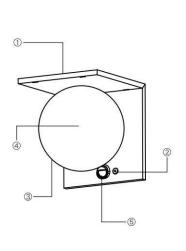

- Solar Panel
 Switch Button
 Lamp Body
 LED
 PIR

 
Battery: Li-ion Battery Solar panel: Monocrystalline silicon Materials: ABS




0

0

 
Take off the bracket from the lamp body




 Drilling and embedding the expansion screws into the wall



Fix the bracket by srews onto the wall

 

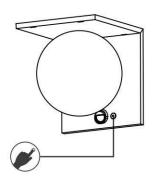

Switch Button

- N/OFF: Long press for 1.5S.
 (After the initial activation, the lamp will turn on/off automatically when dark/dawn.)
 Change lighting mode: Short press.

Lighting Mode

M1: 25% till dawn M2: 10%+PIR (30S) M3: 0+PIR (30S) M4: 100% till dawn

