# INDOOR / TRACKLIGHTS / DISC & SQUARE / DISC SMART

#### Item code 86.TST6.1329.01





- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified
- electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.



#### **INDOOR / TRACKLIGHTS / DISC &** SQUARE / DISC SMART

Item code 86.TST6.1329.01



Please read all instructions before installation to avoid any problems.

 
## Warning

- 1. Indoor lighting, protection level is IP20, do not use in high humidity condition
- 2. Working condition -20°C +40°C, do not use in ultra high(low) temperature environment
- 3. Keep away from flammable and explosive environment
- 4. Do not cover the luminary with insulated liner or similar materials
- 5. Do not install at the place easy to loose, break and other instability surface
- 6. Do not impact or exert greater pressure on the lighting surface

## Cautions

- 1. Power off before replacement
- 2. Don't touch the lamp when light
- 3. Don't use it in sealed fixture
- 4. If not bright, blink, dimming and other fault, please contact our service staff firstly instead of repairing it by yourself
- 5. Consult competent electricians for technical support

# 4 Wire (3-Phase) Track Rail and Adapter Type








4 Wire (3-Phase) Rail

Adapter

Integrated Adapter

# Adapter Installation Instructions

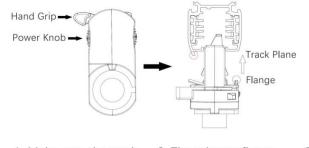


1. Make sure the track adapter's positions are the same as the picture direction with the showed before installation.

2. The adapter flange is in the same track plane.



3. Track dadpter into the track.

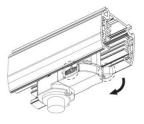


4. Revolve the hand grip in place, select the power knob: phase 1/ phase 2/ phase 3. Can swing clockwise and anticlockwise.



#### INDOOR / TRACKLIGHTS / DISC & SQUARE / DISC SMART

Item code 86.TST6.1329.01


#### **Remove Instructions**

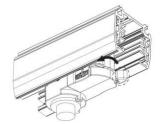

Turn the hand grip to the position as shown

## **Integrated Adapter Installation Instructions**



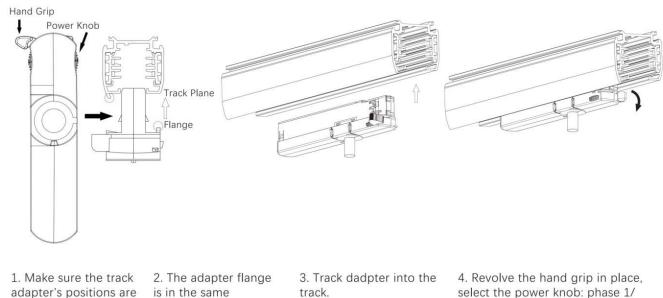

adapter's positions are the same as the picture direction with the showed before installation.


track plane.

select the power knob: phase 1/ phase 2/ phase 3. Can swing clockwise and anticlockwise.

### **Remove Instructions**



Turn the hand grip to the position as shown

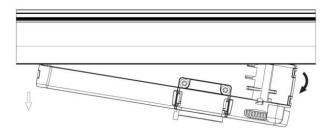

Remove the track adapter as shown

