



**1**

OFF

**2**

Before use, always check dip switch settings

| 1  | 2  | 3  | Power(W) |
|----|----|----|----------|
| —  | —  | —  | 70       |
| ON | —  | —  | 64       |
| ON | ON | —  | 57       |
| ON | ON | ON | 50       |

**3**

Switch to "OFF" position

Fix this lever in this position before putting the luminaire into the rail

**4**

Lock the luminaire by turning this lever

The adaptor flange is in the same direction with the track plane.

**5**

Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3.  
Can swing clockwise and anticlockwise.

Select phase "1", "2" or "3"

**6**

350° Flexible

**7**

ON