



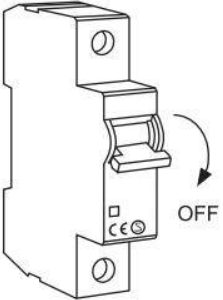

1



2

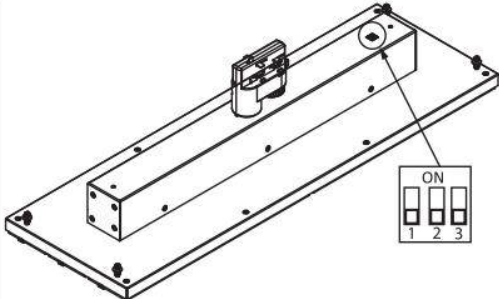

Before use, always check dip switch settings

1	2	3	Power(W)
—	—	—	70
ON	—	—	64
ON	ON	—	57
ON	ON	ON	50

3



Fix this lever in this position before putting the luminaire into the rail

Switch to "OFF" position

4



Lock the luminaire by turning this lever

The adaptor flange is in the same direction with the track plane.

5



Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3.  
Can swing clockwise and anticlockwise.

Select phase "1", "2" or "3"

6



350° Flexible

7



ON