



1

OFF

2

ON

Before use, always check dip switch settings

1	2	3	Power(W)
—	—	—	70
ON	—	—	64
ON	ON	—	57
ON	ON	ON	50

3

Fix this lever in this position before putting the luminaire into the rail

Switch to "OFF" position

4

Lock the luminaire by turning this lever

The adaptor flange is in the same direction with the track plane.

5

Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3.
Can swing clockwise and anticlockwise.

Select phase "1", "2" or "3"

6

350° Flexible

7

ON