



**1**

OFF

**2**

ON

Before use, always check dip switch settings

1	2	3	Power(W)
—	—	—	70
ON	—	—	64
ON	ON	—	57
ON	ON	ON	50

**3**

Fix this lever in this position before putting the luminaire into the rail

Switch to "OFF" position

**4**

Lock the luminaire by turning this lever

The adaptor flange is in the same direction with the track plane.

**5**

Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3. Can swing clockwise and anticlockwise.

Select phase "1", "2" or "3"

**6**

350° Flexible

**7**

ON