



1

OFF

2

Before use, always check dip switch settings

| 1 | 2 | 3 | Power(W) |
|----|----|----|----------|
| — | — | — | 70 |
| ON | — | — | 64 |
| ON | ON | — | 57 |
| ON | ON | ON | 50 |

3

Switch to "OFF" position

Fix this lever in this position before putting the luminaire into the rail

4

Lock the luminaire by turning this lever

The adaptor flange is in the same direction with the track plane.

5

Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3.
Can swing clockwise and anticlockwise.

Select phase "1", "2" or "3"

6

350° Flexible

7

ON