


• Installation and wiring of luminaire must be in accordance with all applicable local codes.
• Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
• DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
• DO NOT install damaged product.
• Make sure electrical power is OFF before and during installation and maintenance.
• Make sure the equipment is properly grounded.
• Make sure the supply voltage is same as the rated fixture voltage.


LED Ceiling light
DOR/DOS

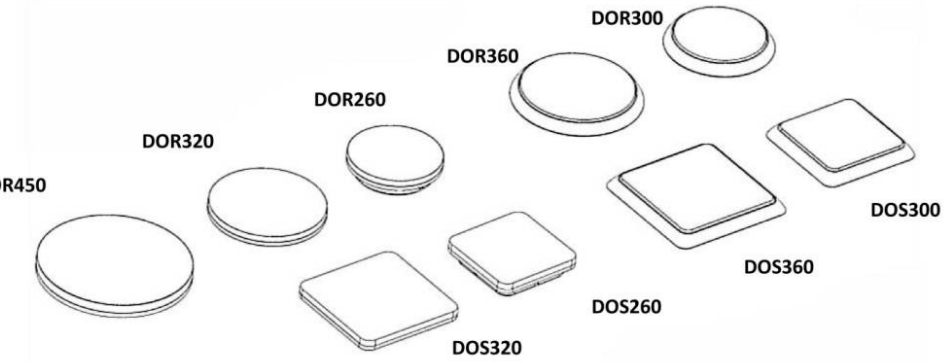


IP54

Required Tools



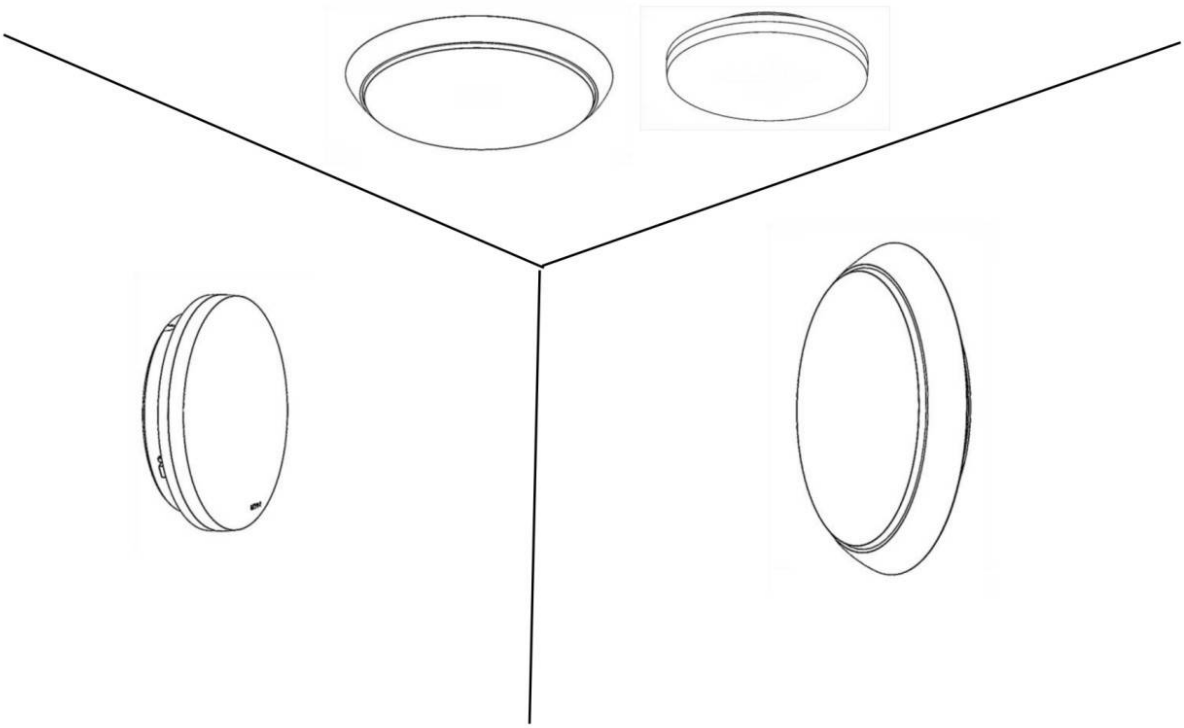

WARNING:

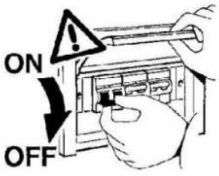


Check that the power is off before conducting any maintenance and assembly work




Caution,danger of electric shock



The installation and commissioning of the luminaire as well as any modification to the luminaire may only be performed by authorized personnel (qualified electrician).

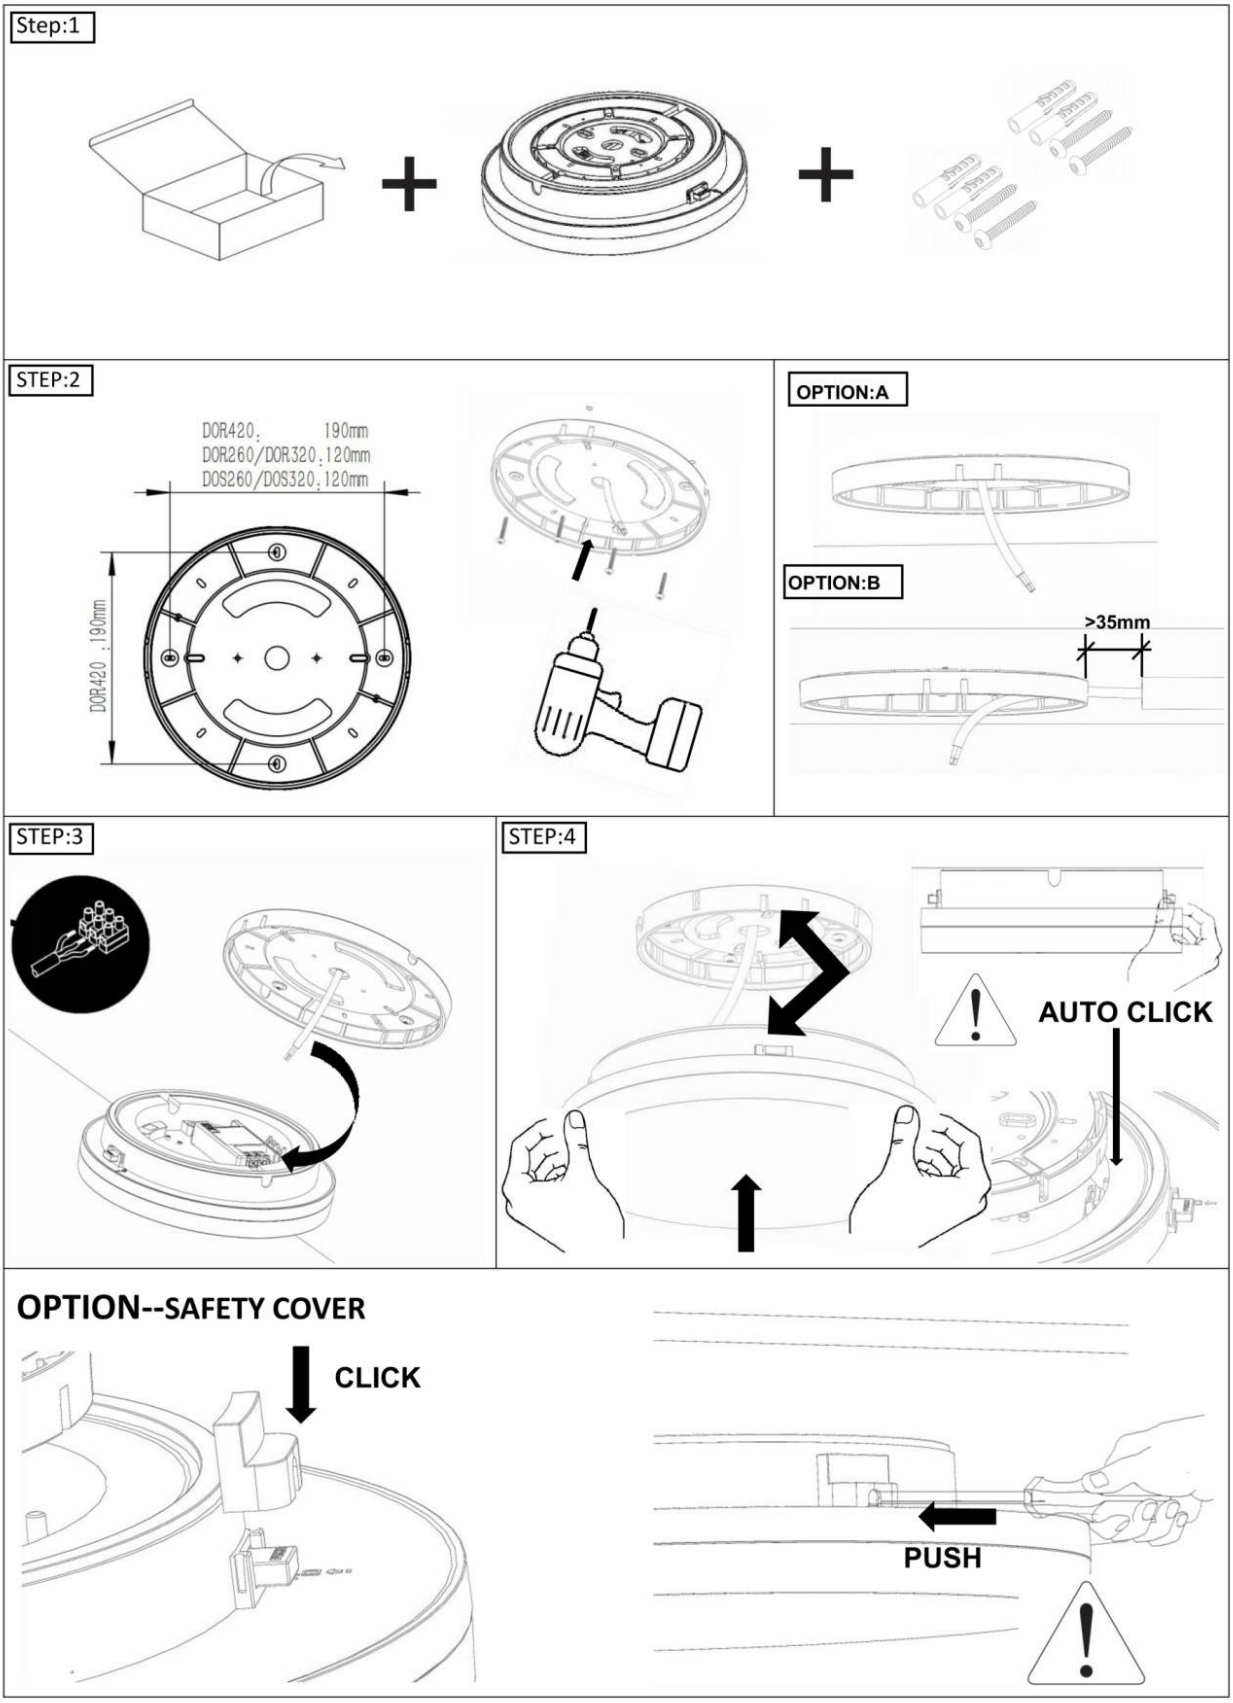
Step:1
STEP:2
DOR420: 190mm
DOR260/DOR320: 120mm
DOS260/DOS320: 120mm
DOR420: 190mm
OPTION:A
OPTION:B
>35mm
STEP:3
STEP:4
AUTO CLICK
OPTION--SAFETY COVER
CLICK
PUSH


I. WIRING DIAGRAMS: CCT+POWER/SWITCHABLE

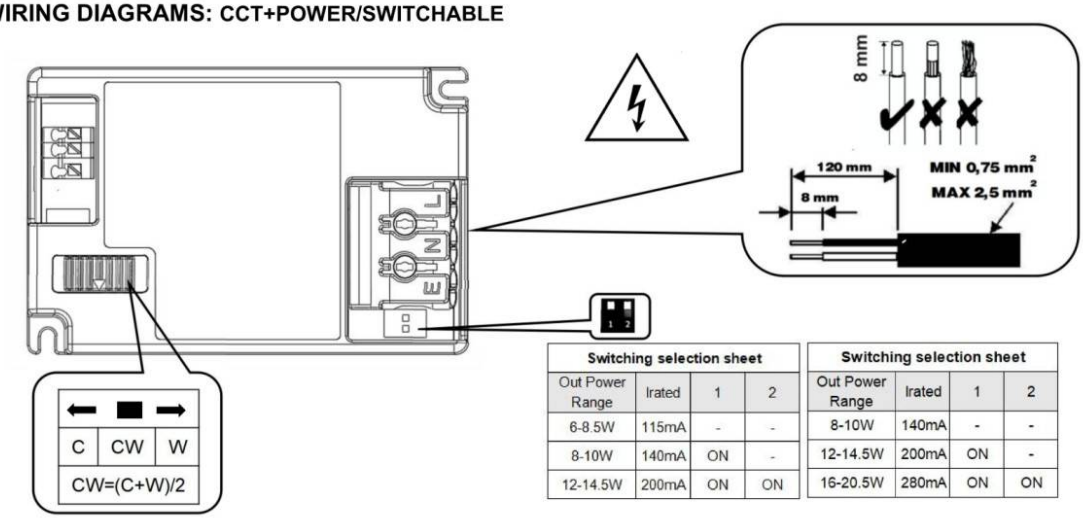

Switching selection sheet			
Out Power Range	Irated	1	2
6-8.5W	115mA	-	-
8-10W	140mA	ON	-
12-14.5W	200mA	ON	ON

Switching selection sheet			
Out Power Range	Irated	1	2
8-10W	140mA	-	-
12-14.5W	200mA	ON	-
16-20.5W	280mA	ON	ON


II. WIRING DIAGRAMS: CCT+POWER/SWITCHABLE+SENSOR/EM2

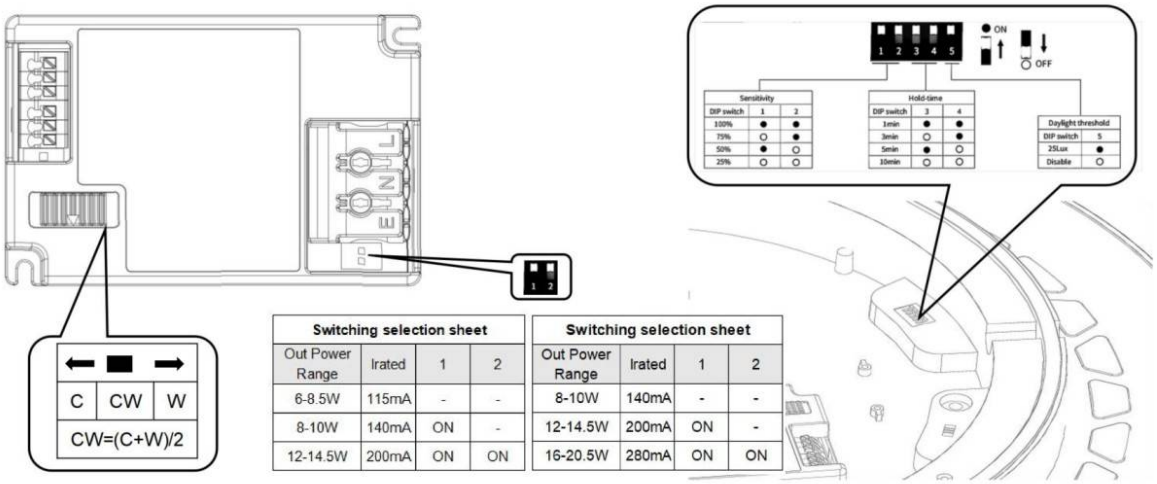

Switching selection sheet			
Out Power Range	Irated	1	2
6-8.5W	115mA	-	-
8-10W	140mA	ON	-
12-14.5W	200mA	ON	ON

Switching selection sheet			
Out Power Range	Irated	1	2
8-10W	140mA	-	-
12-14.5W	200mA	ON	-
16-20.5W	280mA	ON	ON

III. WIRING DIAGRAMS: CCT+DALI (TCI DT6）

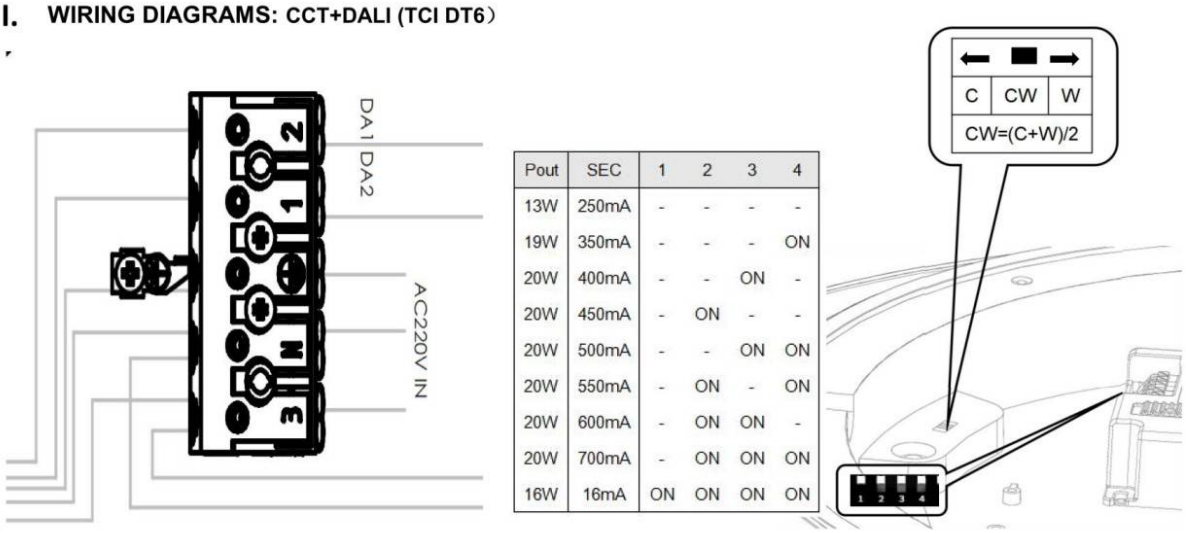

Pout	SEC	1	2	3	4
13W	250mA	-	-	-	-
19W	350mA	-	-	-	ON
20W	400mA	-	-	ON	-
20W	450mA	-	ON	-	-
20W	500mA	-	-	ON	ON
20W	550mA	-	ON	-	ON
20W	600mA	-	ON	ON	-
20W	700mA	-	ON	ON	ON
16W	16mA	ON	ON	ON	ON