



- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

1

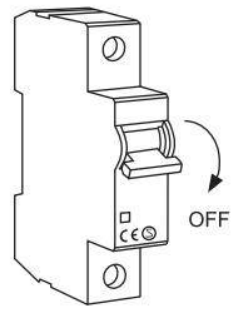



2

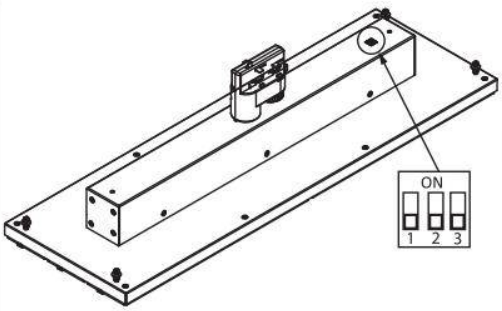


Before use, always checkdip switch settings


| 1 | 2 | 3 | Power(W) |
|---|---|---|---|
| — | — | — | 70 |
| ON | — | — | 64 |
| ON | ON | — | 57 |
| ON | ON | ON | 50 |

3

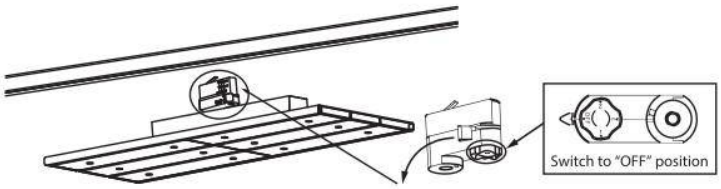



Fix this lever in this position
before putting the luminaire into the rail

4

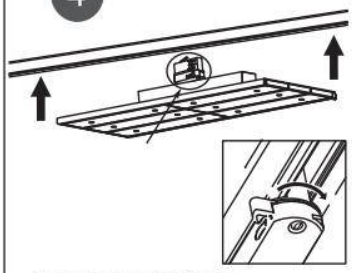


Lock the luminaire by
turning this lever



The adaptor flange
is in the same direction
with the track plane.

5

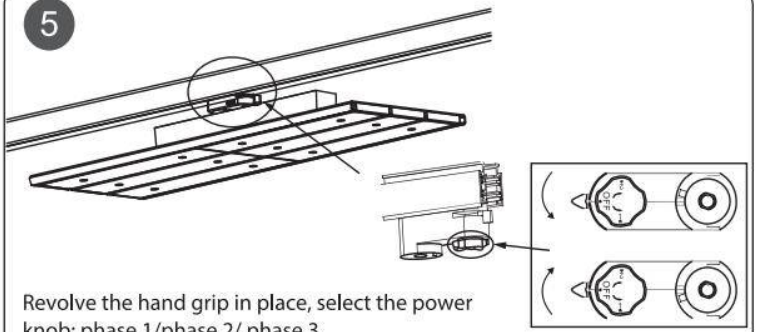


Revolve the hand grip in place, select the power knob: phase 1/phase 2/ phase 3.
Can swing clockwise and anticlockwise.

Select phase "1","2"or "3"

6

350° Flexible

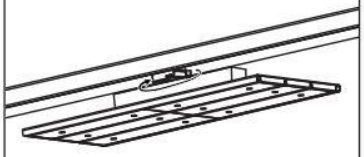

7

