



- **Installation and wiring of luminaire must be in accordance with all applicabie local codes.**
- **Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.**
- **DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.**
- **DO NOT install damaged product.**
- **Make sure electrical power is OFF before and during installation and maintenance.**
- **Make sure the equipment is properly grounded.**
- **Make sure the supply voltage is same as the rated fixture voltage.**

①

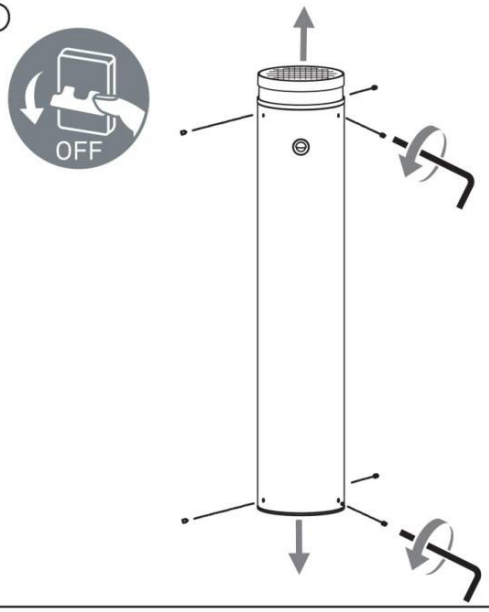


②


Flip the switch

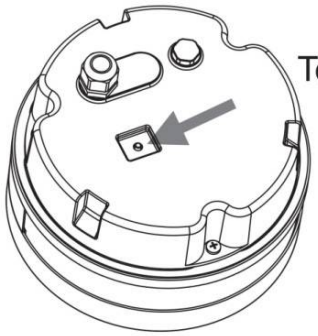

③

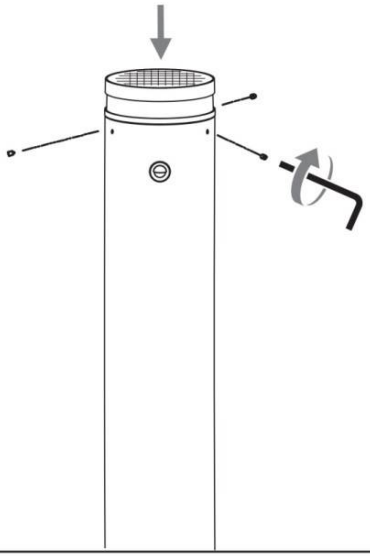


④

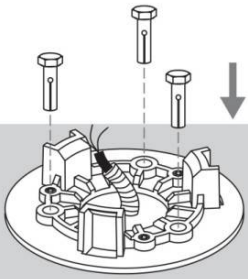


⑤

Not mains complementary
Skip step

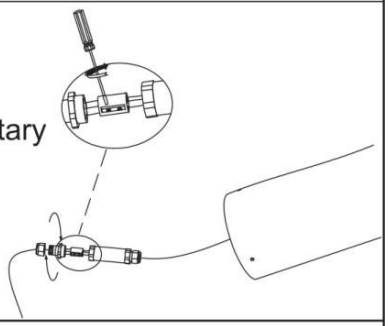

⑥

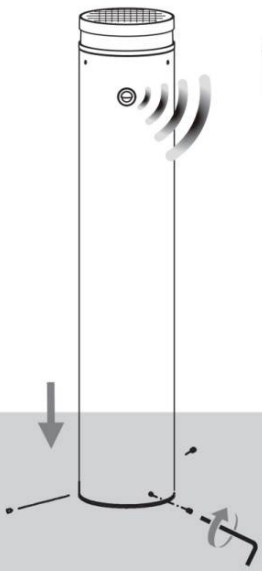

Sensing distance： 8m
Induction Angle： 120°

⑦





Not mains complementary
Skip step