
OUTDOOR / SOLAR WALL LIGHTS / S-CUBE

Item code 86.SO28.1300.02



- **Installation and wiring of luminaire must be in accordance with all applicabie local codes.**
- **Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.**
- **DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.**
- **DO NOT install damaged product.**
- **Make sure electrical power is OFF before and during installation and maintenance.**
- **Make sure the equipment is properly grounded.**
- **Make sure the supply voltage is same as the rated fixture voltage.**

Main Parts

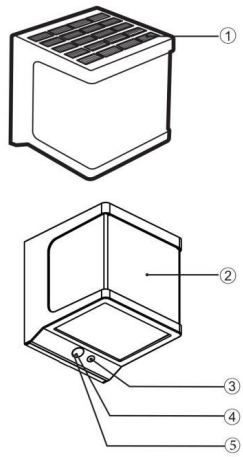


① Solar panel
② Lampshade
③ Switch
④ PIR
⑤ Indicator light

Electrical Characteristics:

Solar panel: Monocrystalline
Rechargeable Battery: Li-ion Battery
Material: ABS & PC


How to install the device?

Fix the lamp on the wall with the screws.

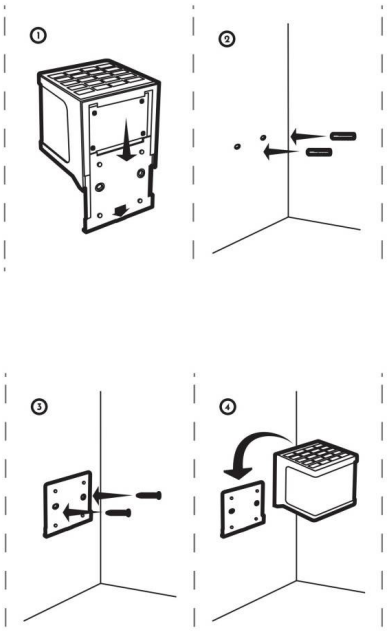

Keep the solar panel face the sunlight directly to ensure it can charge the inside Li-ion battery effectively

Working process instructions

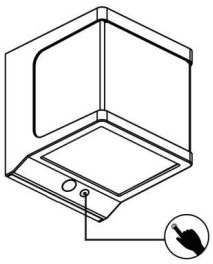

Switch
Press 1.5S for ON/OFF
Short press to change the lighting mode

Lighting mode indicator
Red LED :
M1: Blink one time
M2: Blink two times
M3: Blink three times

Lighting mode
M1: 100LM+PIR 1000LM(10S)
M2: 0+PIR 1000LM(10S)
M3: 300LM 6H