


- **Installation and wiring of luminaire must be in accordance with all applicabie local codes.**
- **Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.**
- **DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.**
- **DO NOT install damaged product.**
- **Make sure electrical power is OFF before and during installation and maintenance.**
- **Make sure the equipment is properly grounded.**
- **Make sure the supply voltage is same as the rated fixture voltage.**

Main Parts

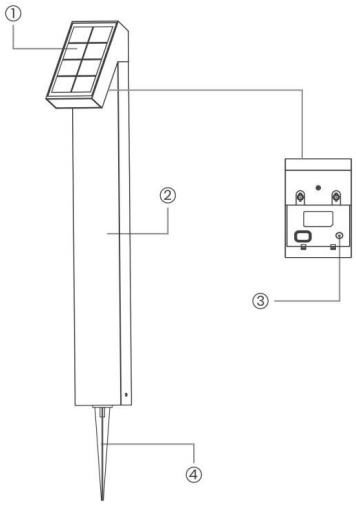


① Solar Panel
② Lamp Body
③ Switch Button
④ Stake

Characteristics

Battery: Li-ion Battery
Solar panel: Monocrystalline silicon
Materials: ABS+Aluminium Alloy


How to install the device?

Expansion Screw Install

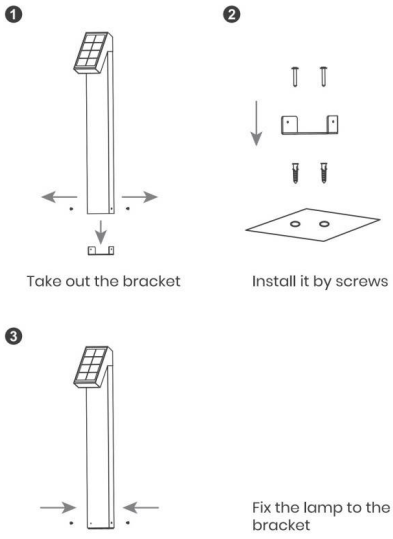


Ground Staking

❶

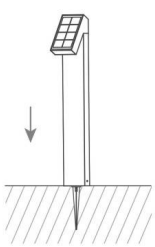

Working process instructions

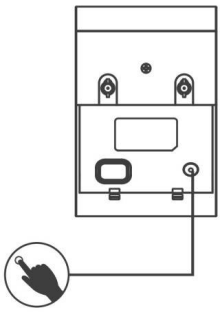

Switch Button

1. Switch on and off: long press for 1.5S
2. Short press to change the lighting mode

Lighting Mode

M1: 25% till dawn
M2: 50% till dawn
M3: 75% till dawn
M4: 100% till dawn