



1

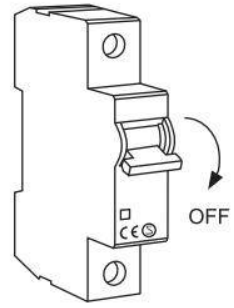



2

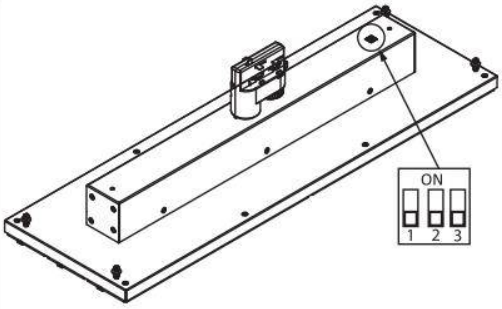


Before use, always checkdip switch settings


| 1 | 2 | 3 | Power(W) |
|---|---|---|---|
| — | — | — | 70 |
| ON | — | — | 64 |
| ON | ON | — | 57 |
| ON | ON | ON | 50 |

3

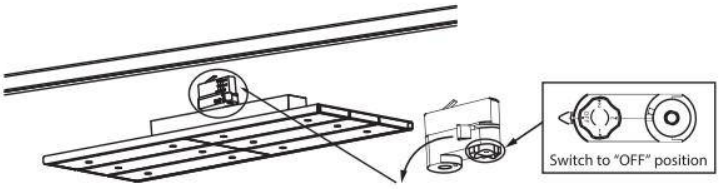



Fix this lever in this position
before putting the luminaire into the rail

4

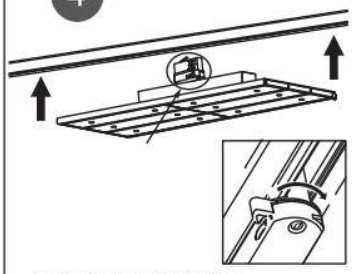


Lock the luminaire by
turning this lever



The adaptor flange
is in the same direction
with the track plane.

5

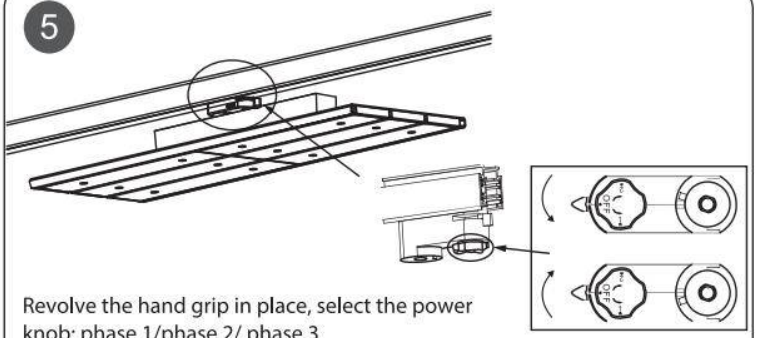


Revolve the hand grip in place, select the power
knob: phase 1/phase 2/ phase 3.
Can swing clockwise and anticlockwise.

Select phase "1","2"or "3"

6

350° Flexible

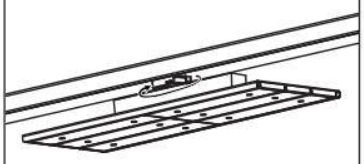

7

