





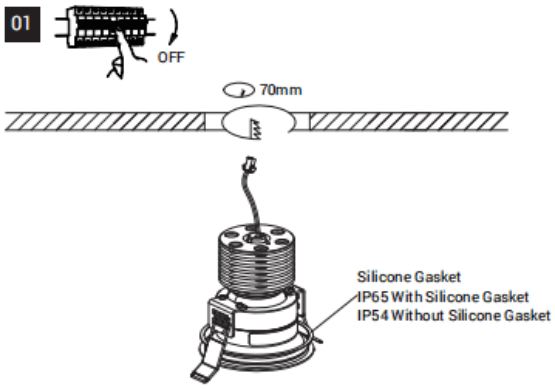

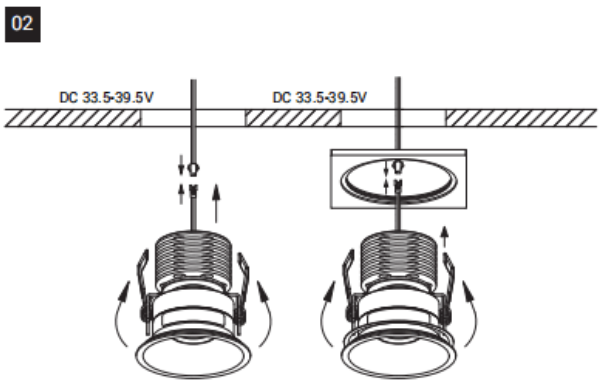

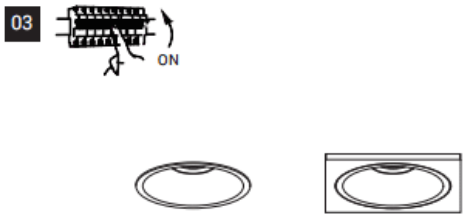

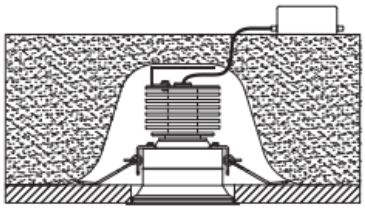

Driver must be installed above insulation.

