

**INDOOR / INDUSTRIAL / DRACO**  
**LINEAR / DRACO LINEAR**  
**ACCESSORIES**




**Item code 86.I006.0001.03**




- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

1. Take out the high bay light and put up-right, and then check to make sure the lamp body is all right.

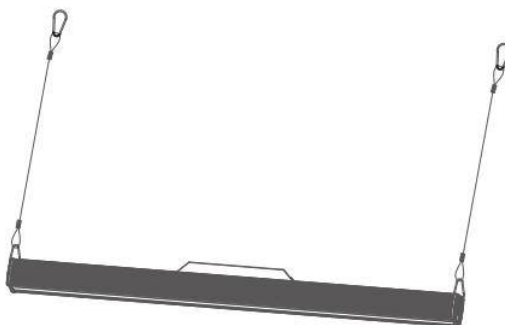

2. **Suspended Installation** : Making clasp, rings and lifting rope fixed successively on high bay and then hanging the other end of lifting rope in right place like below picture.

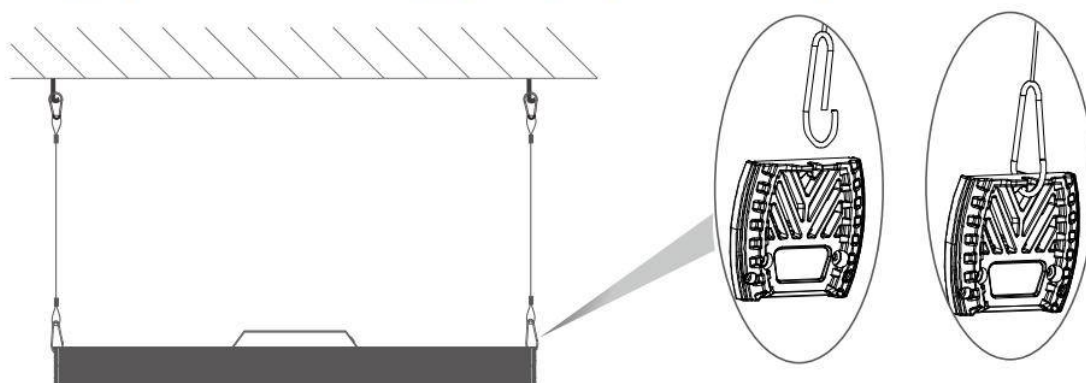

**NOTE:**

The distance between the two holes in the ceiling, recommended range.



Item	Y
100W High Bay Light	$645 \pm 5\text{mm}$
150W High Bay Light	$955 \pm 5\text{mm}$
200W High Bay Light	$1260 \pm 5\text{mm}$

3. Make connection with mains supply as per following instruction and light up.

