
**OUTDOOR / RECESSED INGROUND
FLOOR / LINEAR / LINEAR-SYM**

Item code 86.OIN8.1311.03

LAVOV
L I G H T I N G



Step 1




Step 2



Step 3



Step 4

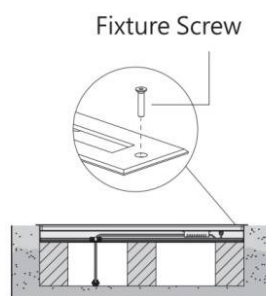

Wiring diagram

High voltage on/off fitting: refer to the following recommended wiring method

Example of wiring:



--