OUTDOOR / RECESSED WALL & CEILING / WATERPROOF PLUS

Item code 86.D042.1343.01






- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- $\bullet \ \mbox{Make sure the equipment is properly grounded.}$
- Make sure the supply voltage is same as the rated fixture voltage.




OUTDOOR / RECESSED WALL & CEILING / WATERPROOF PLUS

Item code 86.D042.1343.01




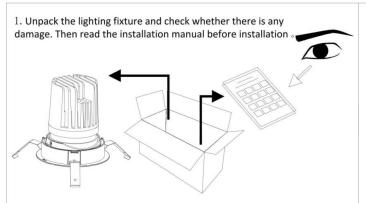


2. Turn off the power before installation $_{\circ}$

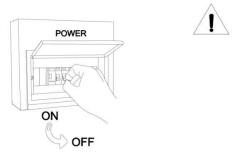


3. Open a hole on the ceiling by tools.

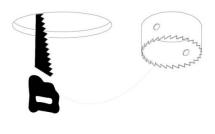

4. Connect the pre-installed wires to the lamp driver, place the driver behind the ceiling from the open hole Attention! The drive cannot be covered.

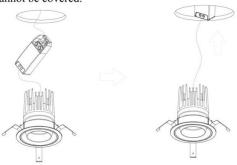

5. Fold up the three shrapnel of the downlight, then install the downlight to the hole as shown to make sure the downlight cannot fall off.

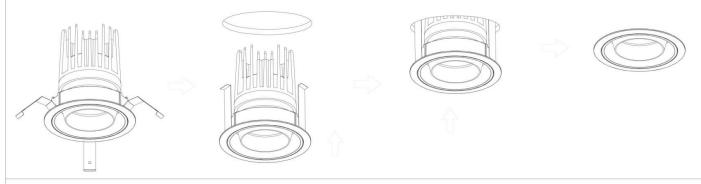

6. Make sure the distance between the downlight and the object as shown. The downlight cannot be covered.

