OUTDOOR / RECESSED INGROUND FLOOR / LINEAR / LINEAR-ASSYM

Item code 86.0IN8.1381.03












Step 1

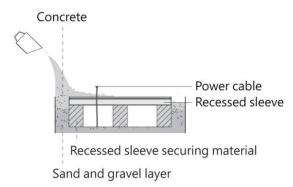

Step 2



Step 3

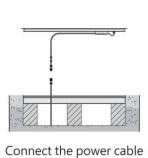

Step 4



Wiring diagram

High voltage on/off fitting:refer to the following recommended wiring method Example of wiring:

