## **OUTDOOR / RECESSED WALL & CEILING / WINDOW**

## Item code 86.ORW1.1351.03






- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.






Step 1




Insert support plates to prevent deformation of the recessed sleeve

Step 2

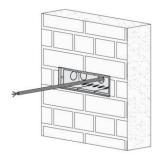


Finish the installation of concrete surface materials and remove the support plates

Step 3

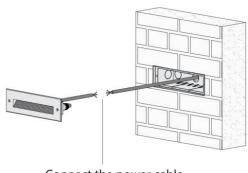

Connect the power cable

## Step 4

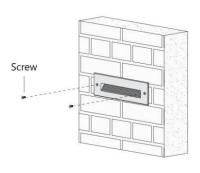

Install the light fixture on the wall

## Wiring diagram

High voltage on/off fitting:refer to the following recommended wiring method Example of wiring:



