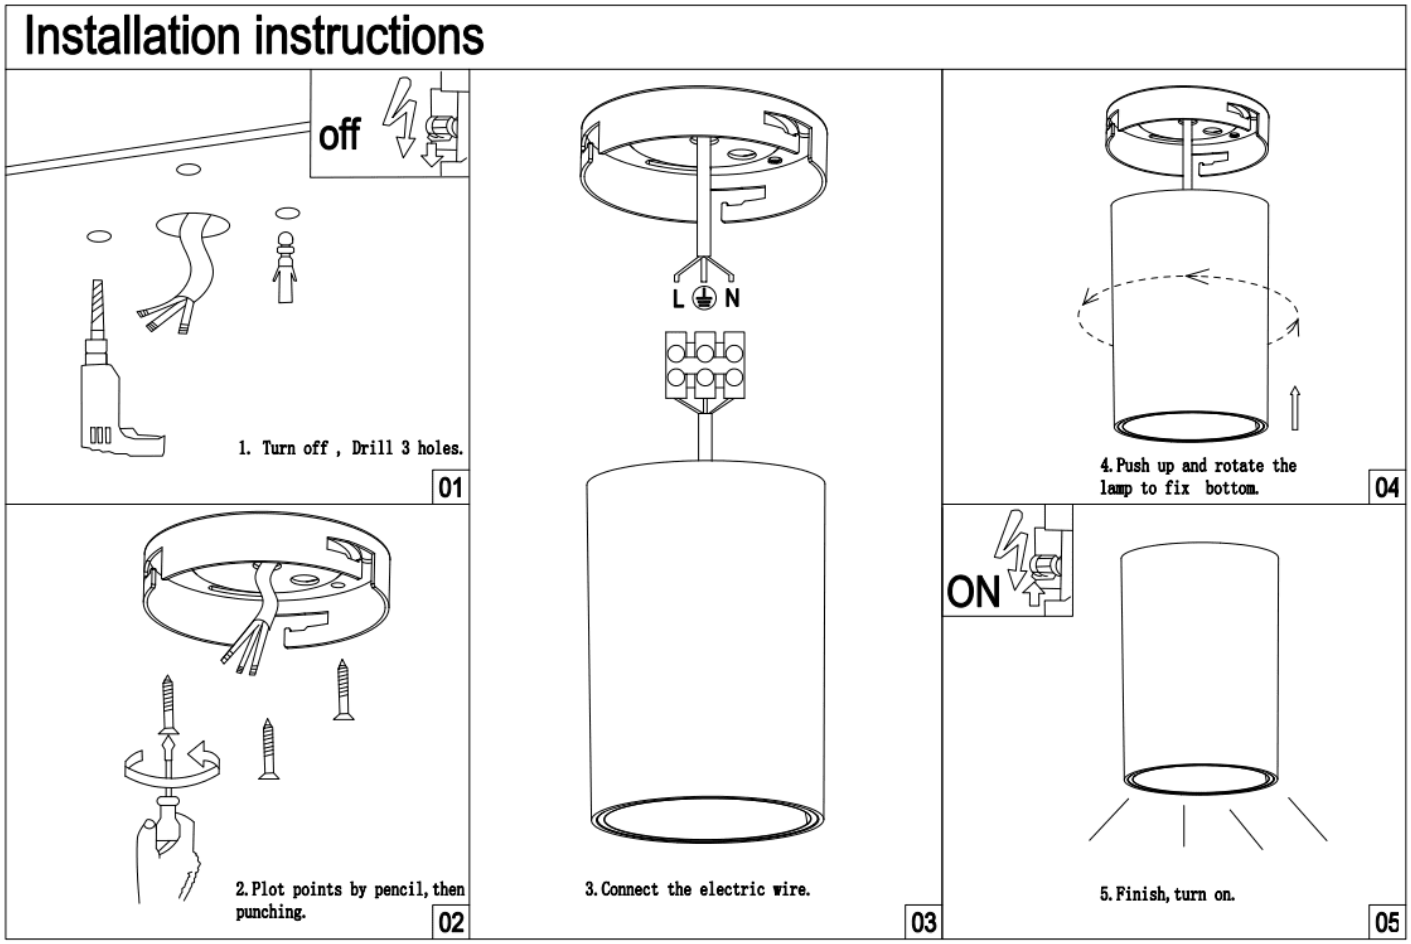



Installation instructions
off
1. Turn off , Drill 3 holes.
01
2. Plot points by pencil, then punching.
02
L
N
3. Connect the electric wire.
03
4. Push up and rotate the lamp to fix bottom.
04
ON
5. Finish, turn on.
05