
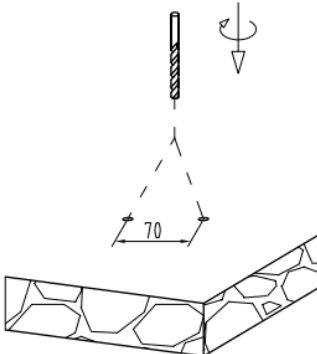
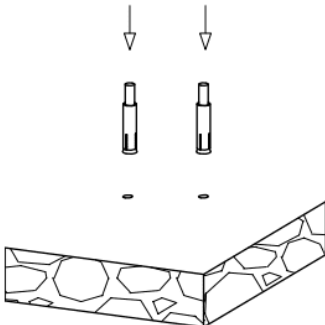
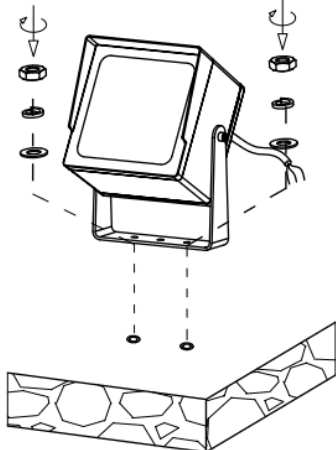
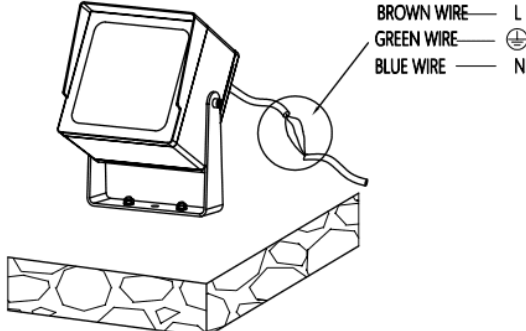


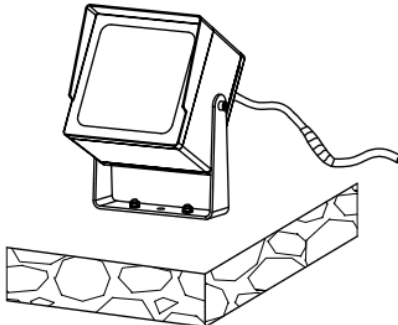

1. Use a hammer drill to drill a hole with a diameter of 8 mm.  1	2. Place two M6 iron expansion into the holes.  2	3. Fix the fixture with the screws and expansion bolt  3
4. Wiring method:  4	5. Wrap the wiring wire with waterproof tape.  5	