
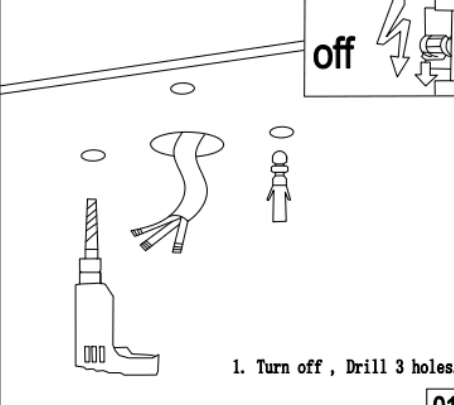
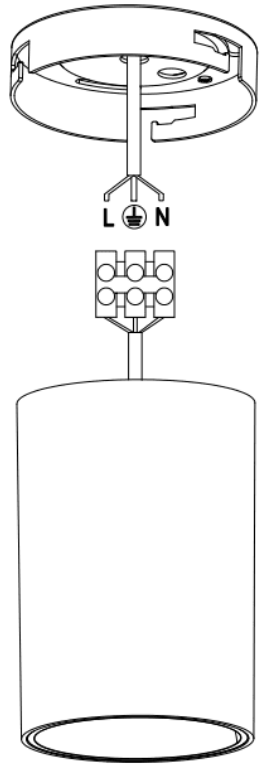
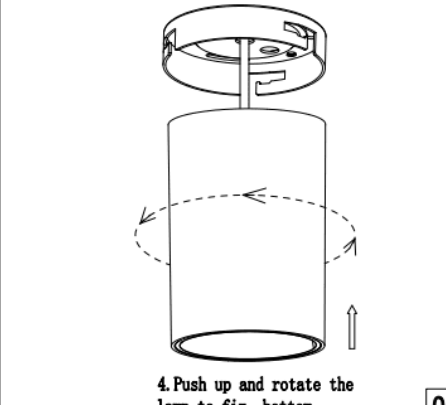
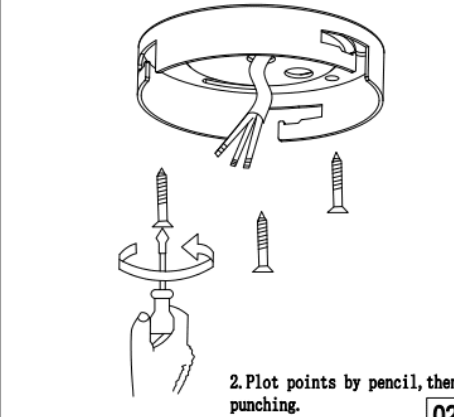


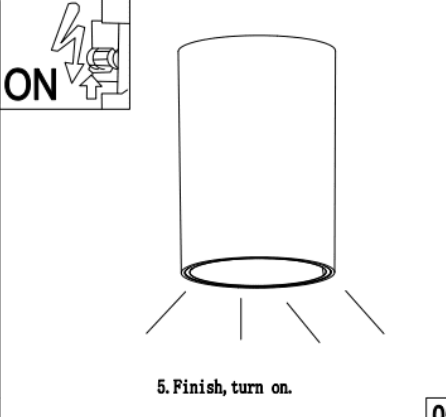

Installation instructions

 off  1. Turn off , Drill 3 holes. 01	 3. Connect the electric wire. 03	 4. Push up and rotate the lamp to fix bottom. 04
 2. Plot points by pencil, then punching. 02		 ON  5. Finish, turn on. 05