



1

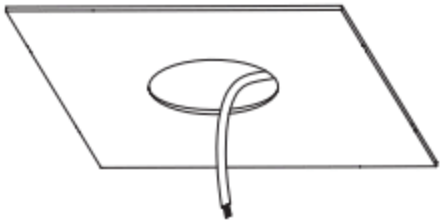

Made cut hole in ceiling accordingly to it's size and make wiring from the power outlet.

2 Put the trimless frame into the cut hole, then fix it to the ceiling by screws.

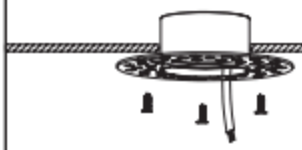









Paint the celing together with the trimless frame after it's fixed.

3

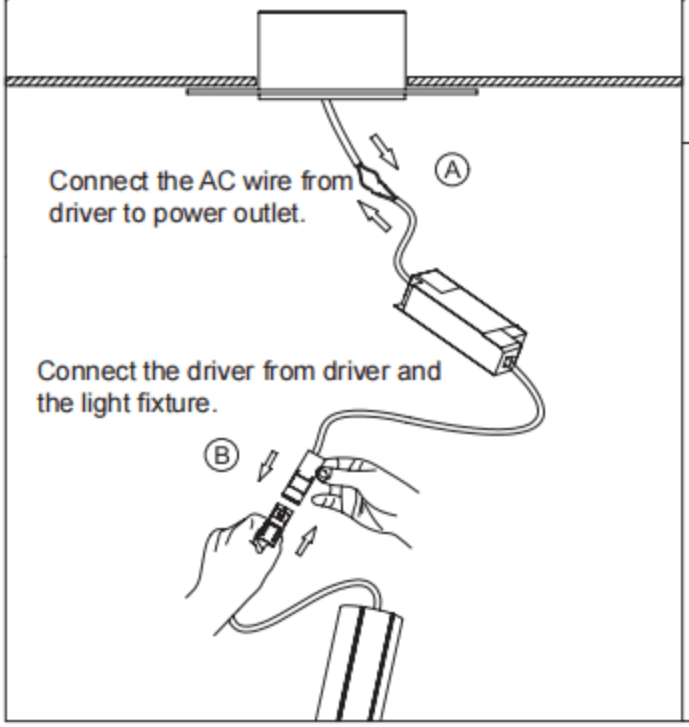

4

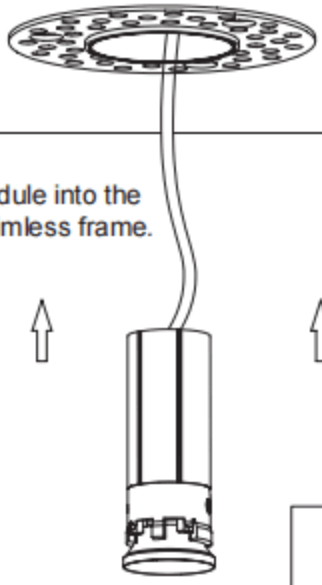

Push the module into the hole of the trimless frame.

*Accessory hook to take out the module

