




STEP 1


1A

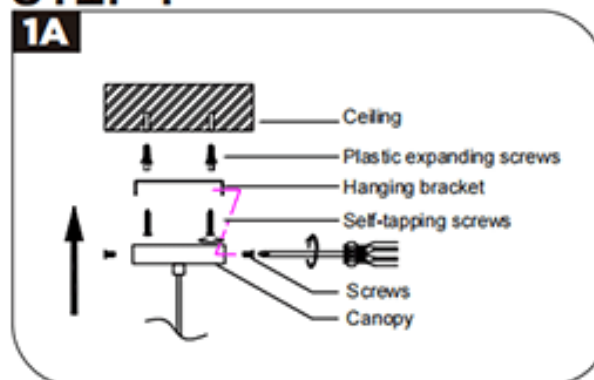

- 1** Remove the nuts and hanging bracket from the canopy.
- 2** Drill 2 $\varnothing$ 6mm holes (depth about 45mm) which matching the hanging bracket hole on the ceiling and use the tool to drive the plastic expansion screw into the hole and tighten it firmly.
- 3** Use a cross screwdriver to lock the hanging bracket to the plastic expansion screw with a self-tapping screw.

STEP 2

2A

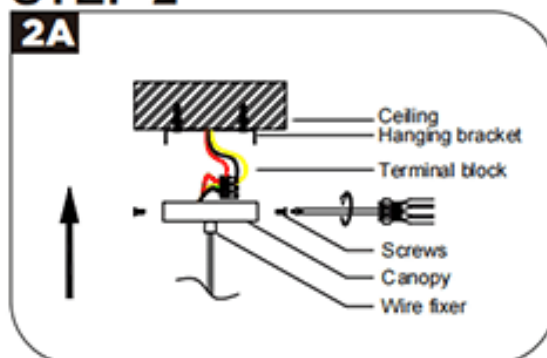

- 1** Use a screwdriver to connect the power cord to the terminal block correctly.
- 2** Unscrew the wire fixer, adjust the wire to the appropriate length, then tighten the wire fixer.
- 3** Use nuts to lock the canopy on the hanging bracket.