
INDOOR / LUMINAIRES ARCHITECTURAUX / WORKSTATION / WORKSTATION FLOOR

Code article 86.A009.1492.02




1

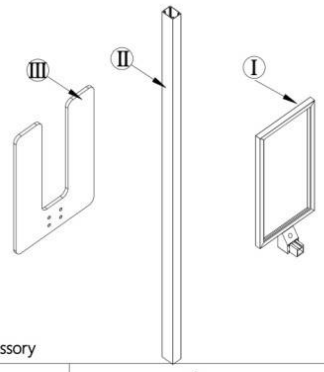

Accessory


Screw A		AX4
Screw B		BX4
Cross point screwdriver		X1
Hexagon screwdriver		X1

2

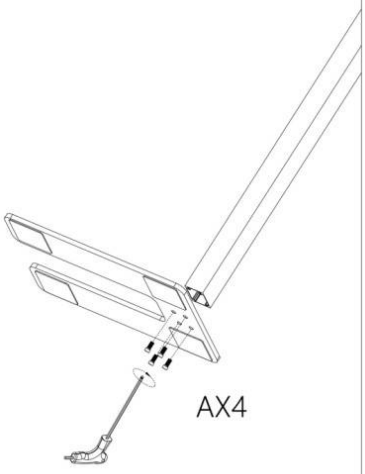


Fix the bottom pole onto base plate

3

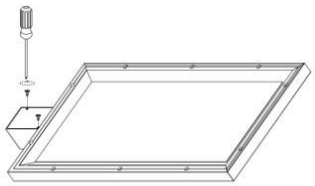

Open the box of lamp body

4

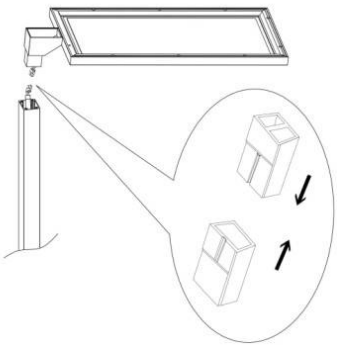

Connect the terminals body

5




Fix the lamp holder with the B screws

6



Close the box by screws

7

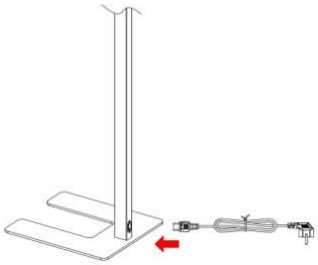

Insert the tail of the AC cable into the terminal seat of lamp pole.

8

