**OUTDOOR / RECESSED INGROUND**
**FLOOR / ING / ING-MINI**

**Item code 86.OIN1.1341.07**

- **Installation and wiring of luminaire must be in accordance with all applicabie local codes.**
- **Installation,inspection,and maintenance of luminaires should be performed by a qualified electrician.**
- **DO NOT make or alter any open holes in the luminaire Do not modify the luminaire.**
- **DO NOT install damaged product.**
- **Make sure electrical power is OFF before and during installation and maintenance.**
- **Make sure the equipment is properly grounded.**
- **Make sure the supply voltage is same as the rated fixture voltage.**

**OUTDOOR / RECESSED INGROUND**
**FLOOR / ING / ING-MINI** **Item code 86.OIN1.1341.07**

## STEP 1

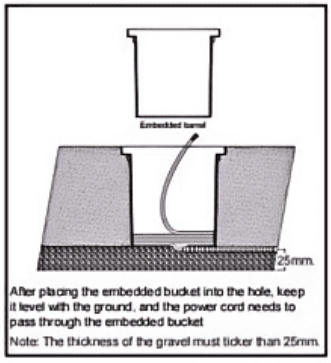


After placing the embedded bucket into the hole, keep it level with the ground, and the power cord needs to pass through the embedded bucket

Note: The thickness of the gravel must ticker than 25mm.

## STEP 2

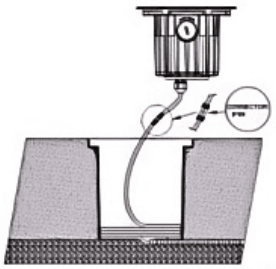

Thread one end of the power cord and the other end of the lamp power cord into the waterproof connector (IP68), conned the power cord, and then lock the waterproof connector, leaving enough length for easy maintenance

## STEP 3

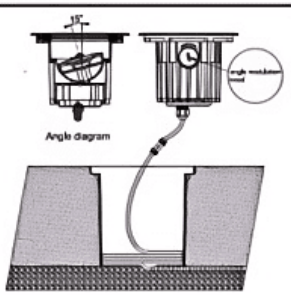


Turning the angle knob left and right can obtain different angles (0°~30°).

## STEP 4

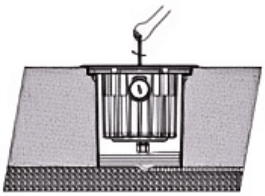

Place the long power cord in the pre embedded bucket, then place the light fixture into the pre embedded bucket and tighten the screw.
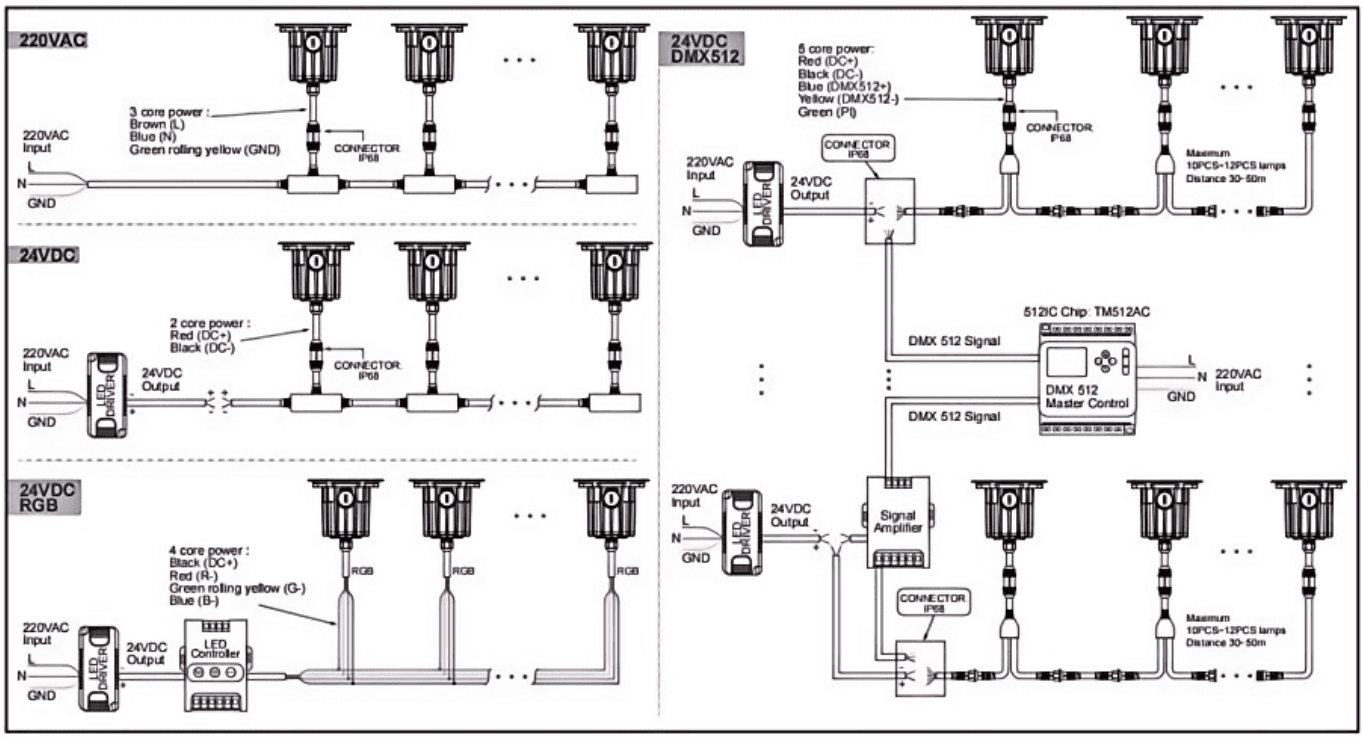
## CONNECTION DIAGRAM