1 Open the ceiling hole in accordance to the given luminaire cut hole size. The suitable false/plaster ceiling thickness shall be 2-25mm.

2 Detach the frame,led module and reflector of the luminaire.

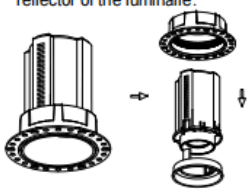

3 Glue the frame to the ceiling and fix it with screws.

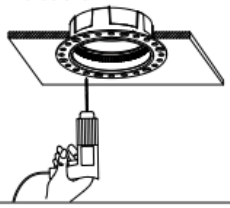

4 Apply white paint and cover the frame.

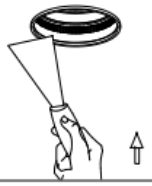

5 Turn off the main switch.

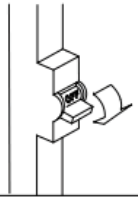

6 Disconnect the electrical power, connect the electrical "L" and "N" wire to led driver.



7 Insert the driver and luminaire led module into the frame hole.



8 Install the driver, and the lamps should be installed as shown in the figure.



9 Insert the reflector into the groove slot.Complete the installation and clean the surface of the luminaire.

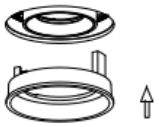
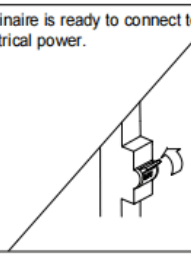
10 Luminaire is ready to connect to electrical power.