



LINEAL / ACCESORIOS DRACO LINEAL

Código artículo 86.I003.0004.00

1. Take out the high bay light and put up-right, and then check to make sure the lamp body is all right.

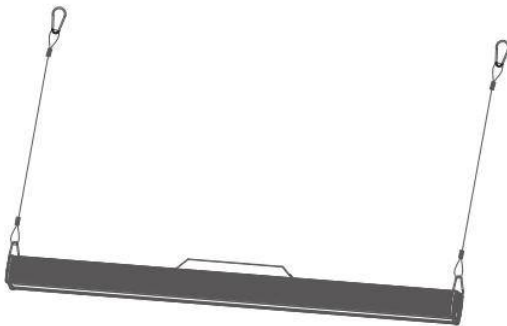

2. **Suspended Installation** : Making clasp, rings and lifting rope fixed successively on high bay and then hanging the other end of lifting rope in right place like below picture.

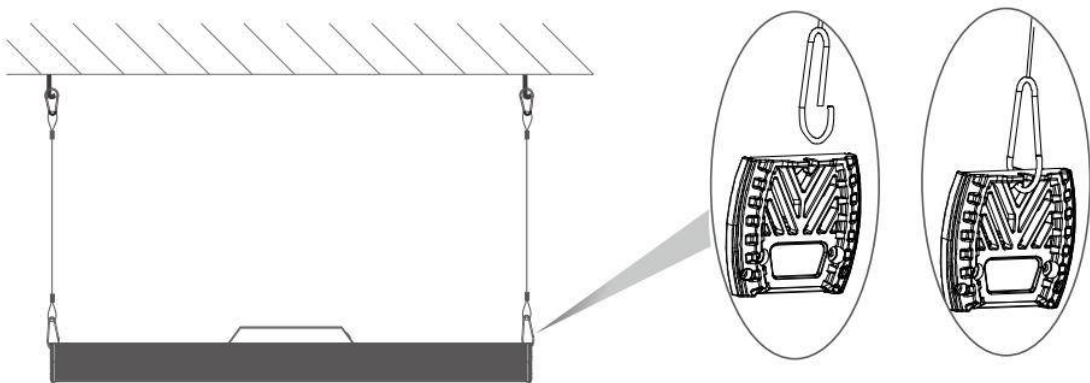

NOTE:
The distance between the two holes in the ceiling, recommended range.



Item	Y
100W High Bay Light	645 ± 5mm
150W High Bay Light	955 ± 5mm
200W High Bay Light	1260 ± 5mm

3. Make connection with mains supply as per following instruction and light up.

