





4. Close the gear tray (pay particular attention not to trap any cables), then fix the diffuser onto the base.

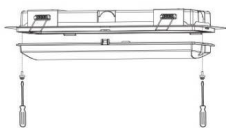

5. Fix the luminaire into the ceiling.

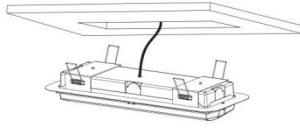

6. Switch on, the green LED indicator will light up.



Instructions for automatic test option

1. Instruction for Automatic test function

Once the unit is powered up, a self-diagnostics test will be automatically initiated:

- Check battery, lamp, charge board and transfer fault all the time.
- Run 3mins duration test every month.
- Run 1H or 3H duration test every year.

Note: All test functions are preset and no need field adjustment.

| | | |
|-------|-------------------------|----------------------|
| • | One flash, 4s pause | Battery disconnected |
| •• | Two flashes, 4s pause | Low battery voltage |
| ••• | Three flashes, 4s pause | Charge board fault |
| •••• | Four flashes, 4s pause | AC/DC transfer fault |
| ••••• | Five flashes, 4s pause | LED lamp fault |

Note: When the fault is recovered, press the test button for 2s, the red flashing indicator will turn green. The fault is cleared, and the unit is back to normal.

3. Button Test

| | |
|-------------------------------------|------------------------------|
| Press test button once | run a 30s duration test |
| Press test button twice within 2s | run a 3mins duration test |
| Press test button 3 times within 2s | run a 30mins duration test |
| Press test button 4 times within 2s | run a 1H or 3H duration test |

2. Dual Colour LED Status Indicator Meaning


- Green indicator solid on: Ready/ Normal Operation
- Red indicator flashes: Require service

Status indication for Self-Testing

System status is indicated by a bi-colour LED and by a DALI status flag.

| LED indication | Status | Commentary |
|--|------------------------|--|
| Permanent green | System OK | |
| Fast flashing green (0.1 sec. on-0.1 sec. off) | Function test underway | |
| Slow flashing green (1 sec. on-1 sec. off) | Duration test | |
| Red LED on | Load failure | Open circuit / Short circuit / LED failure |
| Slow flashing red (1 sec. on-1 sec. off) | Battery failure | Battery failed the duration test or function test/ Battery is defect / Incorrect battery voltage |
| Fast flashing red (0.1 sec. on-0.1 sec. off) | Charging failure | Incorrect charging current |
| Double pulsing green | Inhibit mode | Switching into inhibit mode via controller |
| Binary transmission of address via green/red LED | Address identification | During address identification mode |
| Green and red off | Emergency mode | Battery operation (Emergency mode) |

LED EMERGENCY
BULKHEAD

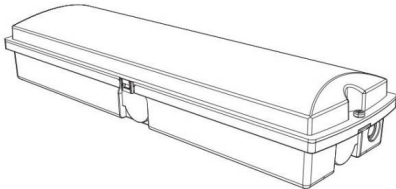

Precautions

Normal Operation: The green LED indicator stays on when connected to mains supply. The indicator will turn off when the mains supply fails.

Battery: LiFePO4/ Ni-Cd rechargeable battery pack. Battery should be replaced when it reaches the end of its lifetime. To avoid damage to the luminaire and ensure its performance, the battery should be replaced with same type.

Test Switch: Press the test button, LED indicator will turn off/ flash and the luminaire will be powered by the battery pack. The light source is non-replaceable. When the light source reaches the end of its lifetime, the whole luminaire shall be replaced.

Installation Procedure

WARNING

1. Switch off before installation or maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.
4. This luminaire is not intended for use in high-risk task area lighting.




Read instructions and check you have all the tools and accessories to complete the installation correctly.

Surface Mount


1. Remove the polycarbonate diffuser from the fitting using cross screwdriver.



2. Use a flat blade screwdriver to open polycarbonate diffuser and gear tray to access the mounting base.




3. Punch out the cable entry hole, connect the mains cable to the terminal, and connect the battery onto the PCB. Fix the mounting base onto wall. Choose maintained or non-maintained mode by connecting or removing the jumper cable.



* Wire "L" "N" to terminal block


| Maintained (default) Jumper cable connected | Non-Maintained Jumper cable removed |
|--|--|
| L: Live SL: Switched Live N: Neutral | L: Live SL: Switched Live N: Neutral |

DALI wiring

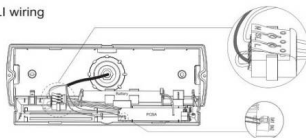

* Wire "L" "N" to terminal block, wire 2 x DALI signal wires to terminal on PCB

Instructions for switching lumen output (LiFePO4 Battery optional)




(Default operation)
Switch to L for low lumen output if need.


4. Close the gear tray (pay particular attention not to trap any cables), then fix the diffuser onto the base.



5. Stick the direction pictogram onto the diffuser (optional).

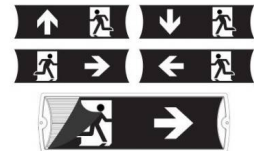

6. Switch on, the green LED indicator will light up.

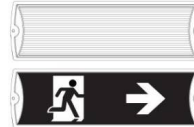


Recessed Mount


1. Cut out size: L330 x W120mm.



2. Refer to step 1 and 2 of surface mount. Fix the base onto the recessed bracket.

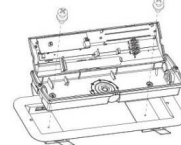


3. Punch out the cable entry hole, connect the mains cable to the terminal, and connect the battery onto the PCB. Fix the mounting base onto wall. Choose maintained or non-maintained mode by connecting or removing the jumper cable.



** Wire "L" "N" to terminal block


| Maintained (default) Jumper cable connected | Non-Maintained Jumper cable removed |
|--|--|
| L: Live SL: Switched Live N: Neutral | L: Live SL: Switched Live N: Neutral |

DALI wiring

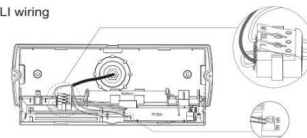

* Wire "L" "N" to terminal block, wire 2 x DALI signal wires to terminal on PCB

Instructions for switching lumen output (LiFePO4 Battery optional)



(Default operation)
Switch to L for low lumen output if need.